

Electric Actuator Motor Mounts

Introduction

Selecting and installing a 3rd party motor on an electric actuator is a popular option for many industrial customers. There are many different types of motors (servo, stepper, induction) available on the market and each selection can affect the mechanical design (mounting and coupling) of the actuator. Customers choose a certain type of motor for many different reasons ranging from ease of use, brand, availability, performance, package and size, among other considerations. This paper will explore the advantages of both the inline and the reverse parallel motor mounting designs for electric actuators to help inform the reader and avoid common mounting mistakes.



Inline Motor Mount



"Reverse Parallel" Motor Mount

Contents

1.	Introduction1		
2.	Design Advantages2		
	2.1	Inline Motor Mount Advantages2	
	2.2	Reverse Parallel Mount Advantages3	
3.	Moto	r Mounting4	
3.	Moto 3.1	r Mounting4 Inline Motor Mount4	
3.	Moto 3.1 3.2	r Mounting4 Inline Motor Mount4 Reverse Parallel Motor Mount5	



2. Design Advantages

2.1 Inline Motor Mount Advantages



Inline Configuration

With an inline motor mount, the motor mounts directly inline with the driveshaft of the actuator. Fewer components are needed in this design to couple the motor to the actuator. This direct coupling allows the actuator to perform more accurately with the reduced backlash compared to the belt and pulley system of a reverse parallel motor kit. In addition, an inline motor mount takes up less space in the width and height of the actuator solution but will make the overall length much longer. The inline motor mount also limits the number of rear pivot mounting options such as a rear clevis.

There is a coupler inside of an inline motor mount that links the motor to the actuator's driveshaft. There are several types of couplers commonly used: spider, servo or rigid (fixed). Deciding which type to use typically depends on the application requirements.



Spider Coupler Design

Spider Coupler: A standard spider coupler utilizes two coupler halves with jaws that engage a rubber "spider" material between the two halves. This design is easy to manufacture, economical, and allows for some alignment correction to occur between the motor's shaft and the actuator's driveshaft to compensate for any misalignment. Spider couplers are commonly available in both aluminum and steel designs. Manufacturers of spider couplers typically have guidelines as to whether aluminum or steel should be used based on application torque requirements. In general, aluminum is used for lower torque applications and steel is used for higher torque applications.



Servo Couplers: Another popular design is the "Servo Style" coupler. This design tries to provide advantages of both rigid and spider coupler styles. This design consists of an aluminum coupler material with mid sections machined to allow for some flex to occur in the absence of a rubber spider material. By leaving the rubber spider material out of the component's design, backlash is theoretically less compared to a spider type. A servo coupler is typically more expensive than a spider coupler due to its mechanical complexity.

Servo Style Coupler



Fixed Couplers: The "fixed" coupler is typically used where application parameters call for zero backlash or extremely high torque applications. This is not the most common or popular type of coupler because it is the most difficult to implement correctly. A "fixed" design requires that there be no misalignment between the actuator and motor shaft. If the two shafts are out of alignment, it could side load either shaft. During normal operation, this misalignment could result in shaft fatigue and damage to the motor/actuator bearing system. This could result in permanent damage. Care must be taken when using a fixed coupler to ensure system alignment. A servo or spider



coupler is typically recommended to help with any misalignment.

Failed actuator driveshaft due to alignment/flex issues.



Reverse Parallel Configuration

2.2 Reverse Parallel (RP) Mount Advantages

With a reverse parallel motor mount design, the motor is mounted parallel to the actuator and coupled to the actuator drive shaft through belts/ pulleys or gears. This type of motor mounting allows for both rear trunnion and rear clevis pivot mounts, increasing mounting flexibility.

The belt material used in the reverse parallel design will have some amount of compliance, which can result in slightly higher amounts of backlash and lower repeatability when compared to an inline design. Backlash will affect the overall precision of the system.

In the RP mounting configuration, actuator manufacturers typically offer 1:1, 2:1, and 3:1 belt reduction ratios. In some cases, a higher ratio of 5:1 can be achieved when using a gear set. In a belt/pulley configuration with a 2:1 ratio, the motor



Clevis Mount

Trunnion Mount

pulley would be twice as small as the actuator pulley allowing the motor to spin twice as fast as the actuator's driveshaft. Through this mechanical advantage, twice as much torque is provided to the actuator's driveshaft. These ratios can be overlooked by consumers causing additional cost expenditures. For example, if the motor used in an application cannot provide the torque required, a common practice is to purchase a gearbox to increase the torque input to the actuator. Gearboxes are usually required to achieve a large torque ratio. However; a change in the pulley ratio can often negate the need for a gearbox. A gearbox can significantly increase the cost of the actuation solution, whereas a change from a 1:1 belt/pulley ratio inside the actuator's mount to a 2:1 ratio is often available as an option at minimal cost.



3. Motor Mounting

3.1 Inline Motor Mount

With so many different motor designs to choose from, mounting a pulley on the motor's shaft can require special couplers. Some common coupling techniques include collar clamps, trantorque, or set screw designs.

A collar clamp is a popular design due to the ease of installation. A trantorque is more complex and requires a working knowledge of how they are constructed to avoid installation challenges.

A trantorque consists of a cylinder shape body with a hole through the center and a hex head provided on one end. When installing a trantorque bushing, the motor's shaft is slid into the bushing and the motor pulley is slid over the bushing. To keep the motor shaft from spinning, it needs to be held in place while turning the hex pattern with a wrench to allow the trantorque bushing to grab onto the motor's shaft and tighten itself to the motor pulley. A torque spec from the manufacturer should be referenced during installation.

A set screw pulley design is another method of coupling a pulley. The set screw concept works best with either a keystock on the motor shaft or when there is a flat on the shaft for the set screw to engage.

Video examples of how to mount an inline motor can be found by following the links:

Spider coupler design: <u>https://www.</u> youtube.com/watch?v=42CHDVeAxUQ

Fixed coupler design: <u>https://www.youtube.</u> <u>com/watch?v=pmTnsplgj-l</u>

Common Motor Pulley Attachments:



	REQUIRED TORQUE		
THREAD SIZE	In-lbs	N-M	
#5-40	20	2.260	
#6-32	25	2.825	
#8-32	46	5.198	
#10-24	67	7.571	
5/16-18	135	15.255	
M3	13	1.469	
M4	40	4.520	
M5	67	7.571	
M6	135	15.255	

Typical torque specifications for various coupler types



3.2 Mounting a Motor in RP Orientation

A video of how to mount a reverse parallel motor can be found by following the link below:

Reverse parallel design: https://www.youtube.com/watch?v=CljljaeooMA

Mounting a motor on a reverse parallel motor mount which utilizes a belt and pulley design can require more attention compared to the simplicity of the inline design. While tensioning the belt, attention must be paid to the process to avoid over or under tensioning the belt. Belts that are under-tensioned will cause the belt's teeth to cog (skip teeth). Belts that are over-tensioned will cause the belt to side load the motor shaft and the actuator's driveshaft.

Note: A gear set design inside the reverse parallel housing is much like mounting an inline motor. It is simply bolted on and a few components are tightened to their correct torque.

Many actuator manufacturers have created their own tools to set the belt tension correctly and consistently from one actuator and motor combination to the next. However, consumers typically do not have access to these custom tools.

The figure below is an example of how to properly tension a belt-driven actuator with a reverse parallel motor mount. The procedure reflects a collar clamp style pulley. This tensioning method may slightly vary between a trantorque or set screw pulley design and a high torque (HT) standard torque (ST) actuator design.



Example of the shafts fatiguing from too high of belt tension being applied





- 1. Take the cover from the reverse parallel (RP) housing (2) off the motor mount (7). Position the motor pulley (3) and its collar clamp (5) so it engages the belt (3) keep the belt loosely tensioned by mounting the motor to the mount without the RP cover installed. The motor fasteners (8) and nuts (6) can be used to loosely hold the motor to the mount (7). Do not put tension on the belt with the RP cover off or damage to the leadscrew (19) and/or RP mount could occur due to the RP cover not being installed to provide the mount and leadscrew with additional strength.
- 2. Once the motor is located on the mount, move the motor pulley to the correct location on the motor shaft so the belt is centered on both pulleys. The motor pulley must have the motor shaft through at least 50% of the pulley to be considered a properly mounted pulley. Tighten the collar clamp fastener to the torque spec provided by the actuator manufacturer. If a trantorque design is being used, consult the trantorque manufacturer for the required torque spec. This situation would apply for a set screw pulley design as well. The motor will likely have to be removed from the mount to tighten the pulley on the motor shaft to its correct location and correct torque requirement.
- 3. With the pulley tightened on the motor shaft, reinstall the motor onto the mount. Tighten the four motor flange fasteners until they tighten with the motor face engaging on the mount. Then, back the fasteners off 1 or 2 turns so that the motor face is close to the mounting surface but still moves freely up and down.
- 4. With the belt cover off, slip the belt on to the pulleys. Check again to make sure that the belt is engaging with the pulleys correctly and that it is not rubbing on anything inside the motor mount.



- 5. Hold the motor in place so that the belt does not come off of the pulleys. If needed, tighten one of the motor flange fasteners to hold the motor in place. At this point, no tension should be applied to the belt. This is meant to simply hold the motor and un-tensioned belt in place on the pulleys.
- 6. Install the RP cover on to the mount.
- 7. After the RP cover is installed, apply weight to the belt. To do this, hang the correct amount of weight from the motor's flange. Tolomatic uses the smallest shaft diameter (motor or actuator) as a guideline to determine the amount of total weight that should be applied to the motor, in order to tension the belt. The table below displays these total weight values. The amount of weight being applied to the unit needs to include the weight of the motor. This "total" weight concept is a good way to approach this mounting method when working in the field.

For example, if the smallest shaft diameter (motor or actuator) is 0.5" (12.7 mm), a total of 31 lbs (14.074 kg) of weight would need to be applied to a reverse parallel belt material. This means if the motor weighs 8 lbs (3.632 kg), an additional 23 lbs (23 lbs + 8 lbs = 31 lbs) (10.442 kg + 3.632 = 14.074 kg) of weight would need to be hung from the motor to create the total 31 lbs (14.074 kg) of pull force on the belt. Keep the weight on the motor as close to the mounting surface as possible. After this weight is attached to the motor, loosen the one tightened motor fastener so the motor moves downward from the pull force of the motor's weight and additional weight that has been applied.

	=	Table
Motor		
	=	
weight		
	Floor	

SMALLEST SI (Motor c	HAFT DIAMETER or Actuator)	TOTAL WEIGH	IT TO APPLY
Inches	mm	lbs	kgs
0.18 to 0.259	4.572 to 6.579	13	5.902
0.260 to 0.499	6.604 to 12.675	22	9.988
0.500 to 0.625	12.7 to 15.875	31	14.074
0.625 and larger	15.875 and larger	40	18.160

8. Once the motor has moved as far as it can go with the total amount of weight applied (in this case 31 lbs), tighten all the motor flange fasteners.

By doing this, the 31 lbs (14.074 kg) total of tensioning force applied to the RP belt material, will have ensured that the RP belt is centered on the pulleys and that the belt is not rubbing on other components.



4. Conclusion

Several motor mount styles are available in actuator solutions. Depending on the application, torque, and mounting requirements, a reverse parallel or inline mounting configuration may be recommended. Care should be taken when sizing an actuator to ensure that the optimal mounting, design style, and belt reduction ratio is selected. Additionally, special attention should be taken during the motor mounting procedure to ensure alignment and proper belt tension is applied to optimize the overall life of the actuator.

Contact your Tolomatic application engineering team for any questions regarding electric actuator motor mounting.



USA

3800 County Road 116 Hamel, MN 55340, USA Phone: (763) 478-8000 Fax: (763) 478-8080 Toll-Free: **1-800-328-2174** sales@tolomatic.com www.tolomatic.com CHINA Tolomatic Automation Products (Suzhou) Co. Ltd.

(ServoWeld® inquiries only) No. 60 Chuangye Street, Building 2 Huqiu District, SND Suzhou Jiangsu 215011 - P.R. China

Phone: +86 (512) 6750-8506 Fax: +86 (512) 6750-8507 ServoWeldChina@tolomatic

ServoWeldChina@tolomatic.com demarks or registered appear in this docum

All brand and product names are trademarks or registered trademarks of their respective owners. Information in this document is believed accurate at time of printing. However, Tolomatic assumes no responsibility for its use or for any errors that may

appear in this document. Tolomatic reserves the right to change the design or operation of the equipment described herein and any associated motion products without notice. Information in this document is subject to change without notice.

EUROPE

Zeilweg 42

Germany

Tolomatic Europe GmbH

60439 Frankfurt am Main

Phone: +49 69-2045-7837

EuropeSales@tolomatic.com

Visit www.tolomatic.com for the most up-to-date technical information

COMPANY WITH QUALITY SYSTEM CERTIFIED BY DNV GL = ISO 9001 = Certified site: Hamel, MN