

TOP TEN TIPS: How to specify electric rod-style actuators for optimal performance, reliability and efficiency

By Aaron Dietrich

About the Author:



Aaron Dietrich has an extensive background in the motion control industry. Aaron has a B.S. in electrical

engineering from the University of North Dakota and an MBA from the University of St. Thomas in Minnesota. Aaron is currently Director of Marketing at Tolomatic.

Tolomatic is a leading supplier of linear actuators, both electric and pneumatically driven. Tolomatic's expertise includes linear actuators, servo-driven high-thrust actuators, servo and stepper motors, drives and configured linear systems. Standard products are built to order and shipped in three weeks or less. Tolomatic also manufactures right-angle gear drives, caliper disc brakes and clutches.

Introduction

With today's demand for controlling costs while achieving high speed and high precision in factory automation, it is more important than ever to fully analyze a linear actuator application and precisely determine a project's parameters. This is especially true with electric rod-style actuators due to their higher initial cost, more advanced design and more predictable performance compared to fluid power cylinders, both pneumatic and hydraulic. Additional engineering and analysis at the front end of an electric actuator application will reduce overall costs and result in automation systems with higher reliability, better performance, lower energy expenditures and reduced maintenance.

In the hurry to get factory automation applications up and running, there is always the impulse to make educated guesses or take shortcuts. This paper will outline the top ten tips to consider during sizing to ensure optimal performance, reliability and efficiency of your electric rod-style actuator application.

Match motor, lead screw, and bearing to loads for best actuator performance.

Tip Number 1: Calculate loads precisely

The ability of an electric rod-style actuator to perform its intended task with accuracy, speed and reliability is dependent on matching the electric motor, the lead screw and the bearings to the anticipated loads. By knowing the precise static and dynamic loads of the application and matching them to the peak and continuous load capabilities of the actuator, the application will be both cost-effective and reliable.



Motor, screw and bearing selection must match the anticipated load capacity of the actuator for best performance and reliability.

Avoid oversizing by properly matching the actuator to the application.

Tip Number 2: Calculate for electric, not fluid power (pneumatic or hydraulic)

Oversizing actuators is a bad habit left over from fluid power applications where oversizing was considered inexpensive insurance against not having enough power. With fluid power cylinders, the additional cost of a slightly larger cylinder than necessary was minor compared to the extra engineering time that might be involved in sizing it correctly. It was common for engineers to build in a 2:1 safety factor into fluid power applications for a variety of reasons. These included erring on the conservative side to compensate for imprecise knowledge of the loads, fluctuations in available air pressure and oversizing in anticipation of higher loads in the future due to production growth or application changes. Electric actuators can cost significantly more up front, so over-sizing is a more costly mistake.

Avoid oversizing by properly matching the actuator to the application. Sizing programs, graphs and formulas available from actuator manufacturers make this task easier and more accurate than in the past.



Tolomatic offers a “How To Guide: Converting Hydraulic Cylinders to an Electric Alternative”. Application Data Worksheets and Windows-based sizing and selection software to simplify the sizing and selection process are also offered.

Duty cycle is defined as a ratio of operating time to resting time of an electric actuator expressed as a percentage.

Tip Number 3: Factor in duty cycle

Duty cycle is defined as a ratio of operating time to idle time of an electric actuator expressed as a percentage. An actuator that is moving for two seconds and stopped for two seconds has a duty cycle of 50 percent.


$$\% \text{ Duty Cycle} = \frac{\text{On Time}}{(\text{On Time} + \text{Off Time})}$$

Underestimating the impact of duty cycle on an actuator can lead to overheating, faster wear and premature component failure. Overestimating the impact of duty cycle can lead to higher initial costs due to oversizing. Typical conservative duty-cycle estimates often stem from an incomplete understanding of the application.

Force and velocity requirements will dictate the type and pitch of the lead screw.

Tip Number 4: Know required force and velocity

When considered together, force and velocity requirements dictate the capabilities of motors, screws and nuts in electric rod-style actuators. A common error is specifying a stepper motor to save money when a servomotor may be more appropriate for velocity and force requirements. As the speed of a stepper motor increases, its available force drops off sharply, whereas servomotors are able to maintain their force even as speed increases. Similarly, force and velocity requirements will dictate the type and pitch of the lead screw – whether it is an Acme screw with either composite or bronze nut, or a ball screw or roller screw. By knowing the precise speed and velocity requirements of the application, it is possible to specify an actuator with the proper components needed for high performance and long service life.

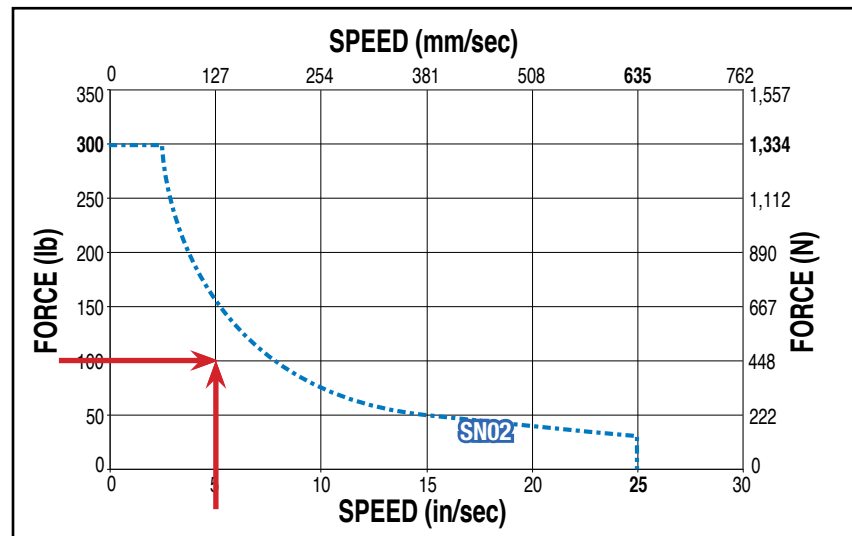

Use the screw charts supplied by the actuator manufacturer to determine if your force and speed requirements are compatible with actuator/screw capacities.

A rod-style actuator is vulnerable to damage and wear if the extended rod is subjected to side loads.


Tip Number 5: Employ proper guides and avoid side loading

A rod-style actuator is vulnerable to damage and wear if the extended rod is subjected to even moderate side loads. Side loads on the rod usually occur when the actuator is out of alignment with the main load, causing severe wear to the front bearing and damage to the lead nut. The mounting of the actuator can also be a factor. For example, an actuator rod will have a tendency to run out of alignment at maximum stroke when it is mounted with a clevis type rod end, creating significant side loads on the rod and support bearing. To avoid side loading, be sure the actuator rod has an appropriate mounting and is either guided or precisely aligned with the load.

In rod-style actuators, lead screw critical speed becomes an upper limit.

Tip Number 6: Set critical speed limits

Higher operating speeds can often improve manufacturing throughput, but in a rod-style actuator, lead screw critical speed becomes an upper limit. Critical speed refers to the rotational speed that excites the screw's natural frequency. When a screw reaches critical speed it begins to oscillate or "whip." The critical speed limit is dependent on the screw length and diameter. As the stroke length increases, the distance between the support bearings increases, causing screw oscillation over a certain speed. This oscillation prematurely wears the support bearings and can result in vibration, noise and even catastrophic failure.

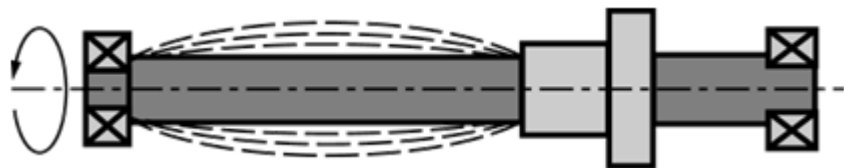

When the stroke of a rod-style actuator increases so does the distance from the actuator's support bearing. In some cases, if the distance becomes greater than the capacity the screw and bearing can handle, oscillation of the screw occurs, placing stress on the bearings.

Peak force needed for the application cannot exceed the peak force that can be delivered by the actuator.

Tip Number 7: Match peak force to actuator

The peak force needed for the application cannot exceed the peak force that can be delivered by the actuator. First determine what the peak force requirement is for the application and then compare that to the force curve for the selected actuator. Force curves from actuator manufacturers show a combined peak and continuous force capability. For most of the duty cycle, the force stays under the continuous force curve. Make sure that the actuator's peak and continuous force capabilities are properly matched to the motor; some motors can provide more peak force than the actuator can withstand, causing stresses that will lead to premature failure.

RSA SIZE	MAX. STROKE in	SCREW CODE	TPI	LEAD ACCUR- ACT in/ft	BACK- LASH T in	MAX. FORCE lbf	DYNAMIC LOAD RATING** lbf	BASE ACTUATOR INERTIA			INERTIA PER/in OF STROKE lb-in ²	DYNAMIC TORQUE TO OVERCOME FRICTION lb-in
								In Line lb-in ²	Reverse 1:1 lb-in ²	Parallel 2:1 lb-in ²		
24	24	RN04	6.35	0.0004	0.0012	1,700	5,577	0.709	0.188	0.115	0.004	5.30
	24	RN05	5.08	0.0004	0.0012	1,700	5,577	0.709	0.188	0.115	0.004	5.30
	24	RN10	2.54	0.0004	0.0012	1,556	5,577	0.709	0.188	0.115	0.004	5.30
32	36	BZ10	10.00	0.0060	0.0080	2,500	NA	2,252	0.338	0.160	0.009	3.13
	36	BN(L)02	2.00	0.0040	0.0150	2,500	3,364	2,252	0.338	0.160	0.010	2.44
	36	BN(L)05	5.00	0.0030	0.0150	950	1,624	2,252	0.338	0.160	0.009	2.31
	36	BNM20	1.27	0.0020	0.0050	2,364	2,560	2,252	0.338	0.160	0.011	5.60
	36	RN04	6.35	0.0004	0.0012	4,159	12,761	2,692	1.751	0.784	0.011	6.20
	36	RN05	5.08	0.0004	0.0012	3,878	12,761	2,692	1.751	0.784	0.011	6.20
50	36	RN10	2.54	0.0004	0.0012	4,159	12,761	2,692	1.751	0.784	0.011	6.20
	48	BZ10	10.00	0.0060	0.0080	3,500	NA	6,537	2,026	0.843	0.035	4.13
	48	BN(L)01	1.00	0.0040	0.0150	2,300	2,300	6,537	2,026	0.843	0.029	3.63
	48	BN(L)02	2.00	0.0040	0.0150	4,250	5,355	6,537	2,026	0.843	0.028	4.25
	48	BN(L)04	4.00	0.0040	0.0150	3,250	5,159	6,537	2,026	0.843	0.026	7.50
	48	BNM05	5.08	0.0020	0.0040	2,347	4,035	6,537	2,026	0.843	0.026	7.50
	48	BNM10	2.54	0.0020	0.0040	2,471	3,372	6,537	2,026	0.843	0.026	7.50
	48	BNM25	1.02	0.0040	0.0050	2,524	2,537	6,537	2,026	0.843	0.026	7.50
	48	RN05	5.08	0.0004	0.0012	7,868	16,245	7,072	9,859	4,379	0.060	8.50
	48	RN10	2.54	0.0004	0.0012	7,868	16,245	7,072	9,859	4,379	0.060	8.50
64	60	BZ10	10.00	0.0060	0.0080	7,000	NA	16,342	13,578	7,670	0.139	5.44
	60	BN(L)53	0.53	0.0040	0.0150	3,500	5,961	16,342	13,578	7,670	0.180	7.19
	60	BN(L)02	2.00	0.0040	0.0150	9,050	11,402	16,342	13,578	7,670	0.142	5.31
	60	BN(L)04	4.00	0.0040	0.0150	4,250	6,746	16,342	13,578	7,670	0.140	5.38
	60	BNM05	5.08	0.0020	0.0040	3,906	6,714	16,342	13,578	7,670	0.170	9.40
	60	BNM10	2.54	0.0020	0.0040	5,479	7,476	16,342	13,578	7,670	0.170	9.40
	60	BNM20	1.27	0.0020	0.0050	5,105	5,528	16,342	13,578	7,670	0.170	9.40
	60	BNH(L)02	2.00	0.0040	0.0020	2,900	16,253	16,342	13,578	7,670	0.140	9.40
	60	RN05	5.08	0.0004	0.0012	18,039	23,843	16,342	13,578	7,670	0.125	9.40
	60	RN10	2.54	0.0004	0.0012	11,997	23,954	16,342	13,578	7,670	0.125	9.40

Be sure to use the manufacturer's tables or charts to determine the maximum force capacity of the actuator and select the actuator that best fits the application.

It is equally important to perform necessary column strength calculations and verify that the actuator is capable of providing the required peak force without screw or rod buckling.

IP-ratings only address static conditions. Dynamic conditions (vibration, heat, cold, movement) also have to be considered.

Tip Number 8: Factor in environment

H₂O Chemicals
Abrasives **Oil**
130° F **30° F**


The environment in which the actuator will be operating can have a profound effect on performance, reliability and maintenance. High temperatures can affect seals, lubrication, bearings and motor life. Extremely low temperatures can also affect

performance, lubrication and wear. Contamination with oil, water or abrasive grit can destroy seals unless the actuator has an appropriate IP rating. Since IP-ratings only address static conditions, dynamic conditions (vibration, heat, cold, movement) also have to be considered.

Overall stroke length and actual working stroke length of an actuator will be different due to the “dead length” needed to accommodate internal components.

Tip Number 9: Total envelope matters


It is important to consider the overall actuator “envelope” – the length and width of the actuator and motor when the rod is fully extended. Failure to consider the total envelope may limit the size of motor that can be used or require an alteration in the layout of the application. Be aware that the overall stroke length and actual working stroke length of an actuator will be different due to the “dead length” needed to accommodate internal features such as lead nut, bumpers and limiters.

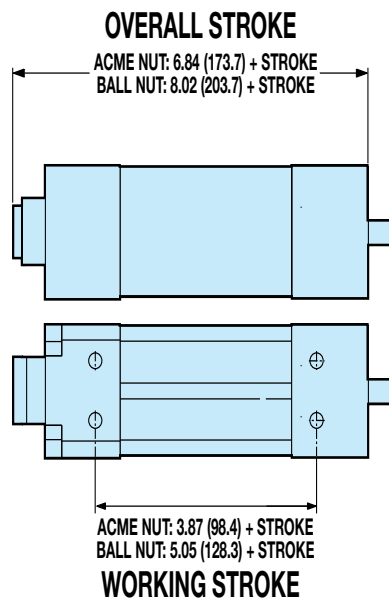

In some cases it is better to alter the application than compromise on drive system performance.

Tip Number 10: Drive system is more than a footprint

The actuator may be specified with an inline or reverse-parallel (RP) motor mount/drive system. While a RP system offers a more compact length envelop, the RP system will cost a little more due to the additional machined components, belts, pulleys or gears. RP motor mounts do offer gear/belt ratios for a mechanical advantage and inertia matching where an inline motor mount would require the addition of a planetary gearbox to offer these features in the actuator system. Additionally, the RP motor mount offers the mechanical mounting option of a rear clevis for applications requiring pivoting. From a performance perspective, the inline motor mount with a servo coupler offers slightly more efficient drive system and higher dynamic performance with the elimination of the additional components (belts, pulleys, gears).

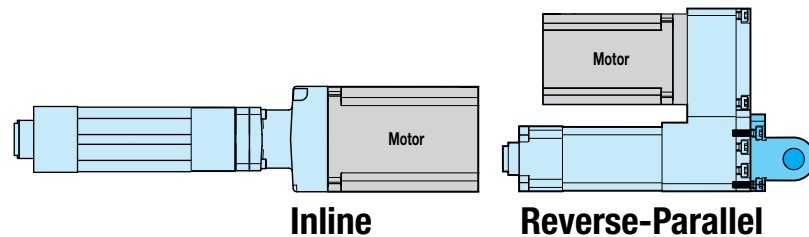

This illustration shows the space-saving feature of the reverse-parallel motor mounting option with a rear clevis as opposed to an inline configuration. Be sure to select the configuration that best suits the required performance.

Conclusion

Electric rod-style actuators offer enhanced performance, control and efficiency over their fluid power (pneumatic and hydraulic) counterparts. However, because of the higher initial cost of electric actuators and their unique characteristics vs. a fluid power cylinder, it is essential to fully understand the application requirements. More productive and reliable automation systems will result from a careful determination and analysis of the loads, forces, application footprint and environment.