

INSTALLATION

When unpacking a Tolomatic cable cylinder, BE EXTRA CAREFUL NOT TO SCRATCH OR MAR THE NYLON COVERING ON THE CABLE. The cylinder may be mounted using the bolt holes in the head. When attaching the cable bracket to the driven mechanism, be sure it is in perfect alignment and that it does not deflect the cable to the side. Misalignment can cause excessive wear.

Pretensioning and proof-loading instructions: All double-acting cable cylinders are shipped without being pretensioned. They must be pretensioned after mounting to insure maximum service life of the device. There are two types of stretch in cable— constructional and elastic. The constructional stretch is removed by proof-loading of the cable. The elastic stretch is removed by proper pretensioning of the cable.

Proof-loading of cables (for cylinders without Auto Tensioners):

1. Tighten the bracket terminal lock nuts equally with a torque wrench to torque requirements listed in Table A.
2. Let set for 30 seconds.
3. Loosen lock nuts to remove tension. (But leave them tight enough to eliminate any slack.)
4. Follow Pretensioning Instructions.

TABLE A: TORQUE TO PROOF-LOAD THE CABLE	
MODEL	REQUIRED TORQUE
CC50	325 INCH-POUNDS OR 36.72 NEWTON-METERS

Pretensioning of cables:

1. Block the load some distance from the end of travel to keep cylinder from bottoming.
2. Apply pressure that is 15-20 percent higher than actual load pressure needed to move the load.

NOTE: When the load is stopped externally before the piston bottoms, the relief valve or regulator setting becomes the load pressure.

WARNING: The CC50 cable cylinder develops up to 1919 pounds of force at 100 PSI. Be certain the materials used to block the load are sufficient to withstand these forces.

When pressurized, one cable becomes tight and the other becomes slack. Manually adjust out the slack. Release the pressure. Block the load on the opposite side and pressurize the other port. Repeat the manual adjustment on the other cable. Release pressure and remove blocks. Return the regulator or relief valve to the original load pressure.

The cylinder is now pretensioned. Additional manual adjustment should not be required. It is suggested however, that the cables be checked periodically.

Alternate Method: If the load cannot be blocked for cable pretensioning as stated above, tighten the bracket terminal lock nuts with a torque wrench to total pretensioning torque as stated in Table B.

TABLE B: TORQUE FOR UNBLOCKABLE LOADS				
MODEL	PRETENSIONING TORQUE	+	STARTING TORQUE OF TERMINAL NUTS	= TOTAL PRETENSIONING TORQUE
CC50	180.0 IN.-LBS.	+	30.0 IN.-LBS.	= 210.0 IN.-LBS.

NOTE: For cylinders with Auto Tensioners, the cables must be proof-loaded and pretensioned before pressure is applied to the AT unit.

TO REBUILD THE CYLINDER

1. Remove cylinder from machinery.
2. Disconnect Cable (21) from the Clevis (17) and remove Pulleys (14) on both ends of the cylinder.
3. Remove internal retaining rings (2) from both heads and remove one head from cylinder by removing the four Socket Head Cap Screws (18)
4. Pull Piston (9) towards the opened tube end and remove from Tube (6).
5. Disconnect Cables (21) from Piston (9) and pull back through the Heads (11) with their Gland Seals (3) to remove them.
6. Install new U-cups (8) and O-rings (4) on piston (9) and rethread new Cables (21) through Heads (11), and connect them to the Piston (9).
7. Being careful not to damage the cable, lubricate and install the Gland Seals (3) in the Heads (11), and reinstall the retaining rings (2).
8. Push the piston back into tube by gently tucking in the U-cup (8) with a screwdriver or pencil. Mount head back on cylinder with socket head cap screws (18). Replace the Pulleys (14) and connect cable (21) to the clevis (17).
9. Operate cylinder back and forth by hand several times to be sure it is properly assembled before reconnecting air or hydraulic service.
10. Reinstall cylinder on machinery.

IMPORTANT NOTE: Apply (Blue) Loctite® #242 or equivalent to threaded cable terminal before connecting to the piston.


MAINTENANCE

Keep the cylinder as clean as possible around pulleys, glands, etc. Pneumatic service should be adequately lubricated with SAE 10 or 20 grade non-detergent oil.

Pulleys have permanently lubricated bearings and will require no maintenance. Check the cylinder's cables periodically to help prevent premature or unexpected failures.

Your Tolomatic Cable Cylinder will give you many cycles of trouble free service. However, should a leak occur, a rebuilding kit may be obtained which enables you to replace all the seals in a cylinder to return it to normal operating condition.

OPTIONAL ACCESSORIES

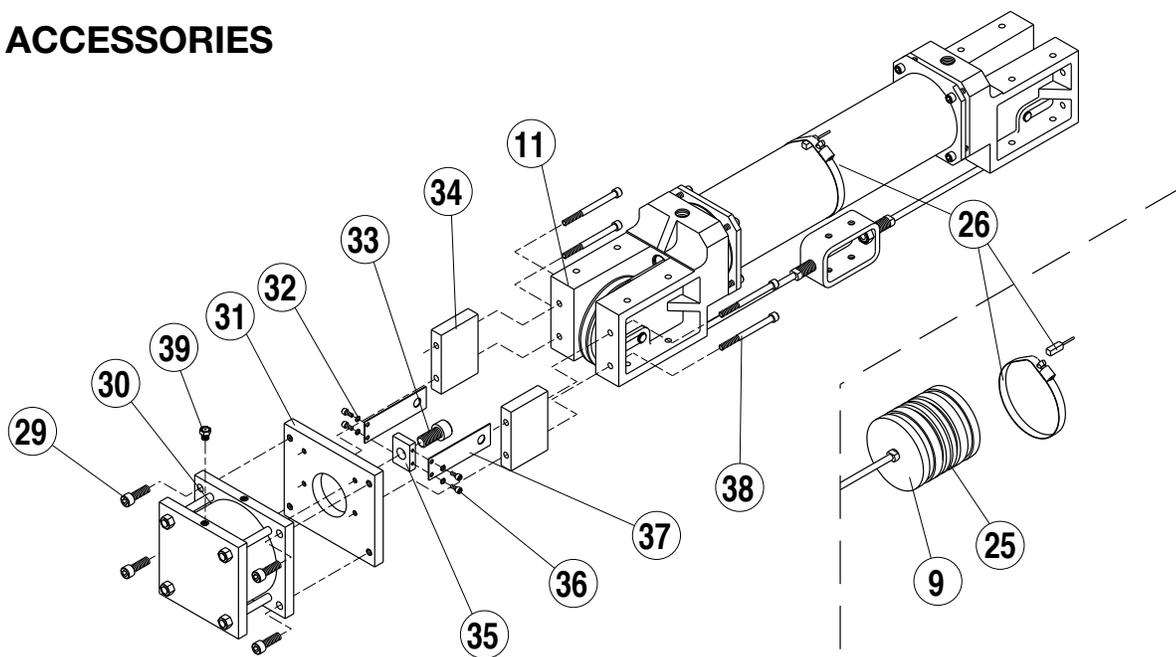

REED SWITCH			
ITEM	PART NO.	DESCRIPTION	QTY
25.	1037-1039	MAGNET	1
*26.	SWCC50RT	SWITCH, REED, FORM A, 5M WIRE	A/R
	SWCC50RM	SWITCH, REED, FORM A, MALE CON	A/R
	SWCC50BT	SWITCH, REED, FORM C, 5M WIRE	A/R
	SWCC50BM	SWITCH, REED, FORM C, MALE CON	A/R
	SWCC50CT	SWITCH, TRIAC, 5M WIRE	A/R
	SWCC50CM	SWITCH, TRIAC, MALE CONNECT	A/R
SWITCH KITS, ORDER VIA SWITCH TYPE CODE TABLE ON PAGE 4			
AUTO TENSIONER			
ITEM	PART NO.	DESCRIPTION	QTY
29.	1037-1035	SOCKET HEAD CAP SCREW	4
30.	1037-1034	CYLINDER	1
31.	1037-1036	MOUNTING PLATE	1
32.	0801-1261	LOCK WASHER	4
33.	1037-1033	SOCKET HEAD CAP SCREW	1
34.	1037-1032	SPACER	2
35.	1037-1030	TIE PLATE	1
36.	0801-1251	SOCKET HEAD CAP SCREW	4
37.	1037-1031	TENSIONER PLATE	2
38.	1820-1060	SOCKET HEAD CAP SCREW	4
39.	1037-1043	FTG, PIPE, BREATHER	1

AUTO TENSIONER OPTION

All cable cylinder models with Auto Tensioner units should be plumbed with a separate, regulated, non-fluctuating pressure source which is a set percentage of the actual operating pressure.

BORE SIZE (IN.)	% OF LOAD PRESSURE
.75	22%
1.0	40%
1.5	86%
2.0	32%
2.0 (500 PSI)	24%
2.5	51%
3.0	54%
4.0	96%
5.0	75%
6.0	57%
8.0	102%

In the above table, load pressure is defined as the pressure required to move the load, NOT the regulated pressure (pneumatic) or the relief valve setting (hydraulic).

NOTE: If the load will be stopped mechanically prior to the piston bottoming, then the regulator pressure or the relief valve setting must be considered to be the load pressure.


If the application is hydraulic, a pressure-reducing valve must be used to ensure a non-fluctuating pressure source to the tensioner(s) or the pressure source must be an independent circuit that will maintain the required differential.

* Available in Reed Switch Kit, Order via Switch Type Code Table on page 4, each kit contains one switch and one clamp

REED SWITCHES

NOTE: Form A Reed Switches should not be used in TTL logic circuits. A voltage drop caused by the L.E.D. indicator will result. For applications where TTL circuits are used, please contact Tolomatic.

WARNING: An ohmmeter is recommended for testing Reed Switches. NEVER use an incandescent light bulb as a high current rush may damage the switch. Reed and TRIAC switches are only recommended for signalling position, not directly powering solenoids. For shifting a solenoid, a relay or resistor is recommended instead of the switch. Switch ratings must not be exceeded at any time

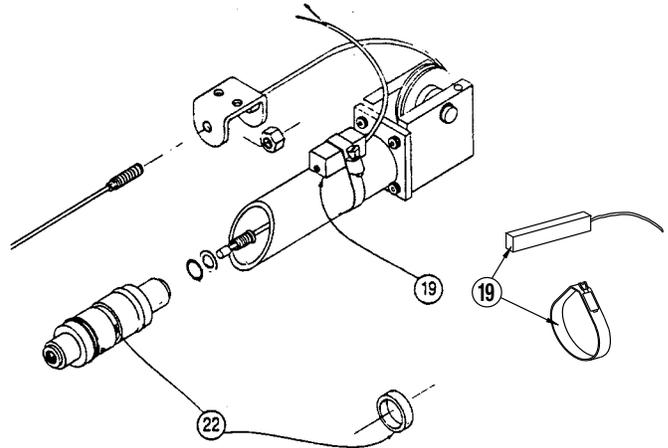

CONFIG. CODE ORDERING		
MOUNTING HARDWARE & FE CONN. INCLUDED		
ITEM	CODE	DESCRIPTION
19.	BT	SWITCH KIT, REED, FORM C, 5M
	BM	SWITCH KIT, REED, FORM C, QD MALE CONN.
	RT	SWITCH KIT, REED, FORM A, 5M
	RM	SWITCH KIT, REED, FORM A, QD MALE CONN.
	CT	SWITCH KIT, TRIAC, 5M
	CM	SWITCH KIT, TRIAC, QD MALE CONN.

NOTE: When ordered female connector & all mounting hardware is included

To Order Retrofit Kits


All Switch Kits come with 1 switch and mounting hardware.

Retrofit ordering method: **S** **W** **□** **□** **□** **□**


EXAMPLE: **S** **W** **CC** **20** **RT**
 Switch Kit Model Size Switch Type Code

ITEM	PART NO.	DESCRIPTION	QUANTITY					
			CC50	CCS50	CCM50	SA50	SAS50	SAIM50
22.	1075-1019	MAGNET			1			
	1001-1202	MAGNET						1

Universal Switch Wiring Diagrams and Label Color Coding


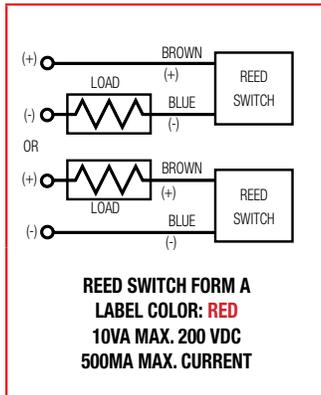


NOTE: The side of the switch with the groove indicates the sensing surface. This must face toward the magnet.

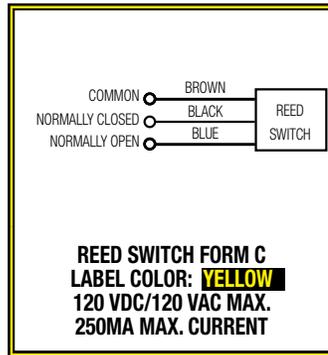

For complete Reed and TRIAC Switch Performance Data, refer to the [Tolomatic Pneumatic Products Catalog](#).

Loctite® is a registered trademark of the Loctite Corporation, www.loctite.com
 Viton® is a registered trademark of the E.I. Du Pont de Nemours Co., www.dupont.com

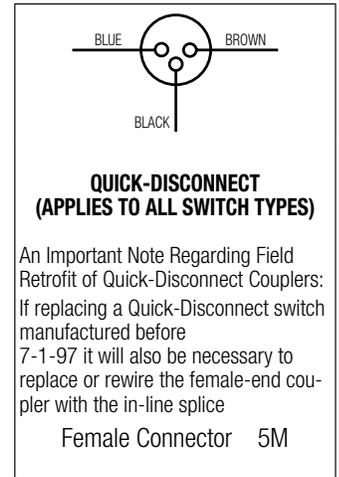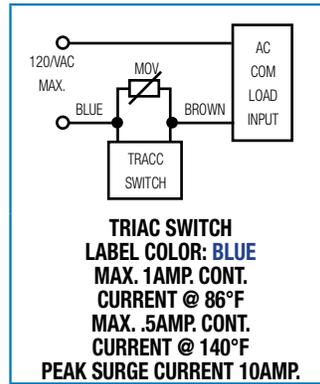

SWITCH TYPE CODE	
BT	FORM C REED SWITCH WITH 5-METER LEAD
BM	FORM C REED SWITCH WITH 5-METER LEAD AND QD
RT	FORM A REED SWITCH WITH 5-METER LEAD

SWITCH TYPE CODE	
RM	FORM A REED SWITCH WITH 5-METER LEAD AND QD
CT	TRIAC SWITCH WITH 5-METER LEAD
CM	TRIAC SWITCH WITH 5-METER LEAD AND QD



3800 County Road 116, Hamel, MN 55340 USA
 http://www.Tolomatic.com • Email: Help@Tolomatic.com
 Phone: (763) 478-8000 • Fax: (763) 478-8080 • Toll Free: 1-800-328-2174

COMPANY WITH
 QUALITY SYSTEM
 CERTIFIED BY DNV GL
 = ISO 9001 =

All brand and product names are trademarks or registered trademarks of their respective owners. Information in this document is believed accurate at time of printing. However, Tolomatic assumes no responsibility for its use or for any errors that may appear in this document. Tolomatic reserves the right to change the design or operation of the equipment described herein and any associated motion products without notice. Information in this document is subject to change without notice.